


# KLS-01.1

## INSTALLATION MANUAL

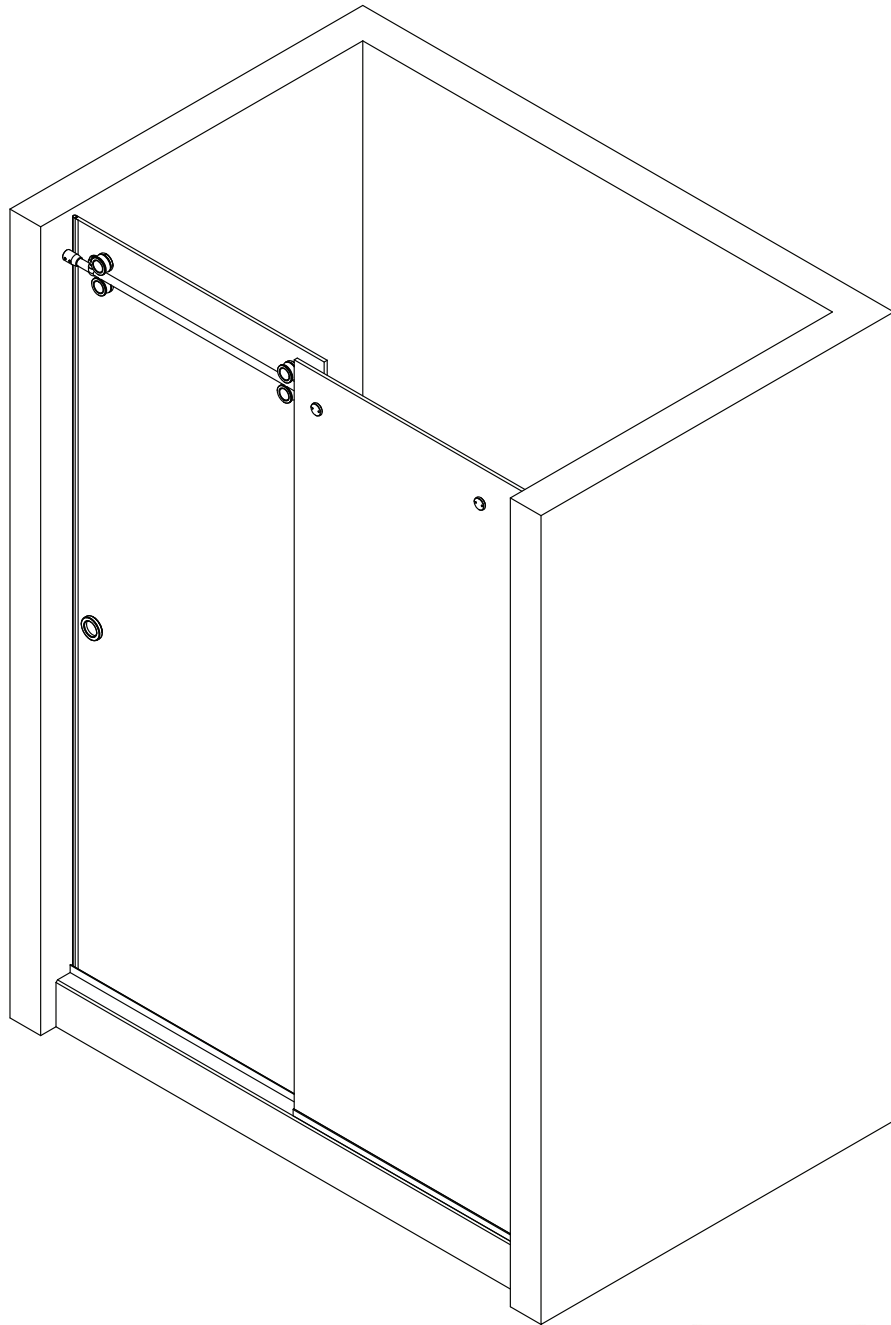

SLIDING SHOWER DOOR



EPCO USA  
ARCHITECTURAL  
HARDWARE  
SOLUTIONS

# PRODUCT INFORMATION

## PRODUCT CAPACITY:

- Maximum Door Weight: 40 KG (88 LBS)
- Maximum Door Width: 812 MM (32")
- Maximum Door Height: 1930 MM (76")

## STANDARD KLS-01.1:

Fits up to 60" wide opening.

## CUSTOM KLS-01.1.72:

Fits up to 72" wide opening with a wide fixed panel. Additional W-T glass fixings to support the fixed panel may be required.




## DANGER:

If this shower is installed with a cut-too-short track bar, wider fixed panel without extra W-T Fixings support, Bottom Anti-Lift Pins are not against the bar, misplaced stoppers, or slide the glass to hit the walls, THESE COULD RESULT IN SERIOUS INJURY.

## CONTACT INFORMATION:

EPCO focus on providing excellent products and services to all customers. For more information or if you have any questions regarding our products, please visit our website at [www.epcocorp.com](http://www.epcocorp.com) or contact us via email at [info@epcocorp.com](mailto:info@epcocorp.com). We're here to help!

# HARDWARE CONTAINS:

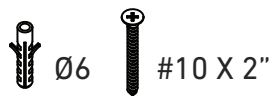

2X




2X



2X



2X

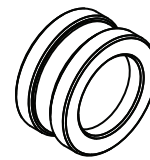


1X




2X




2X

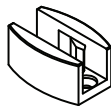


1X

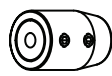


2X

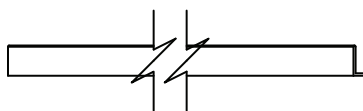


1X

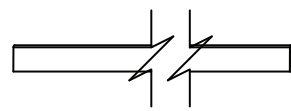

1X

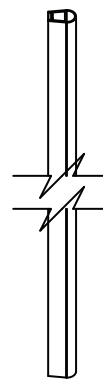


1X

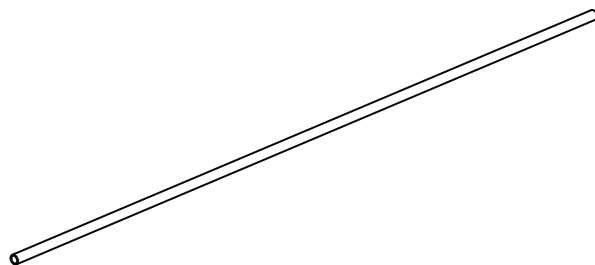


1X

## TOOLS REQUIRED:

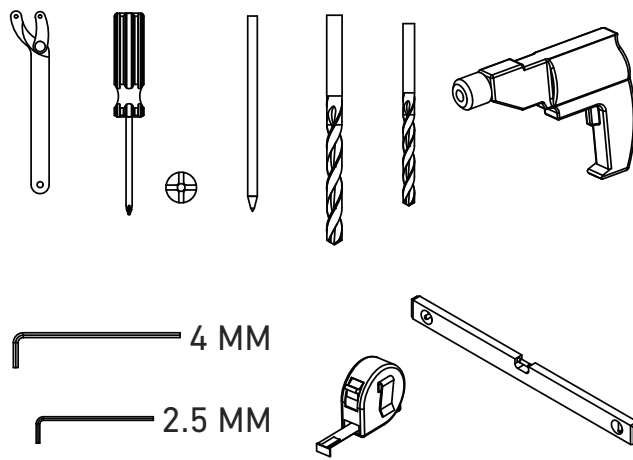


# GLASS TEMPLATE:


**STANDARD KD:**  
Fits up to 60" wide opening.

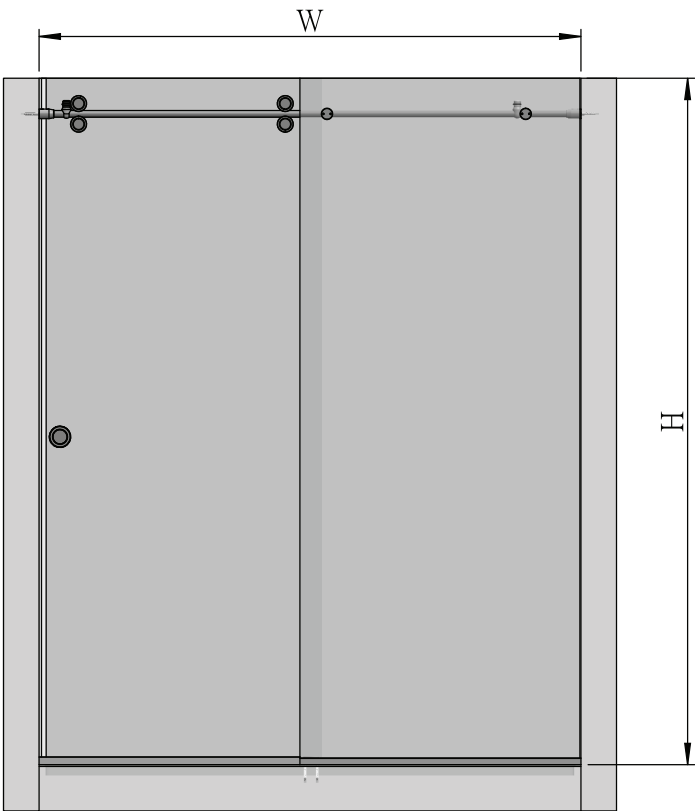

## DOOR PANEL






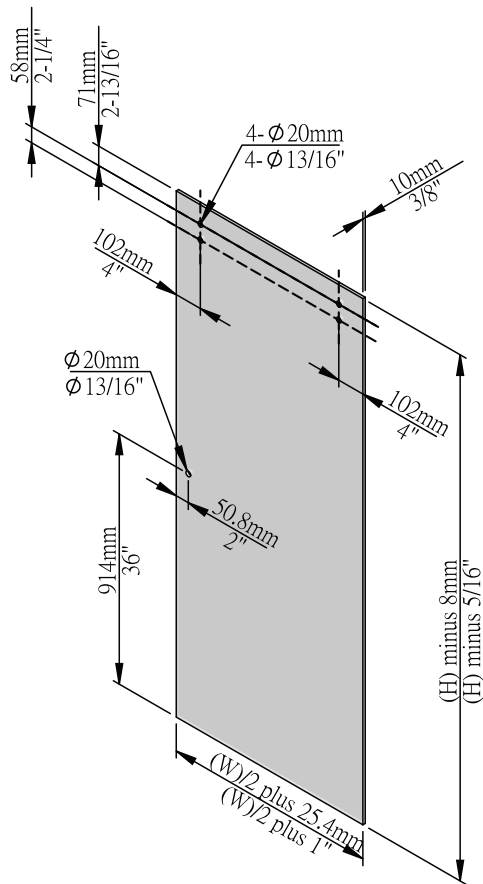


## FIXED PANEL

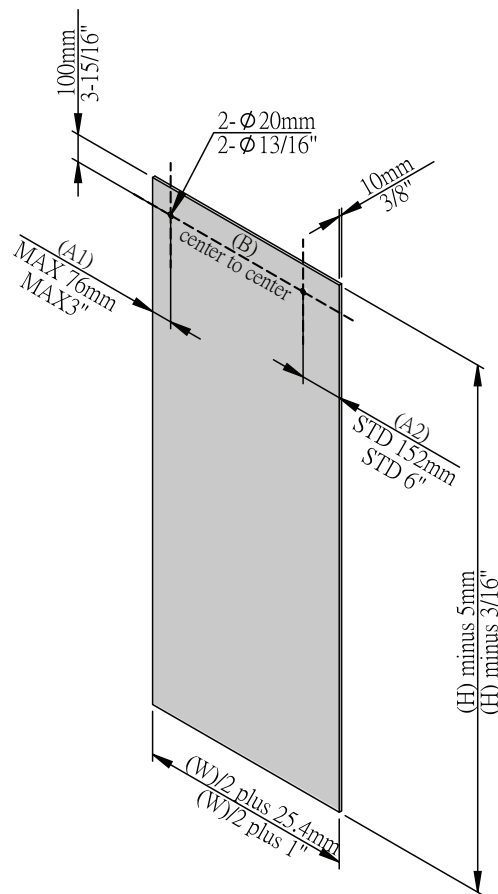


# INSTALLATION INSTRUCTIONS:

## STEP 1

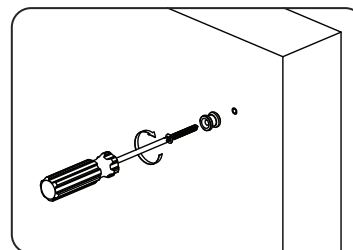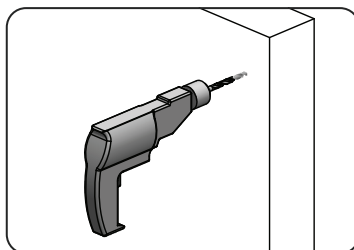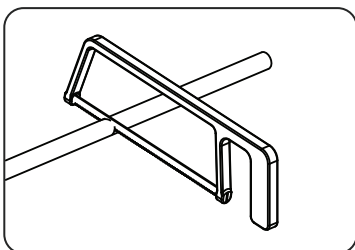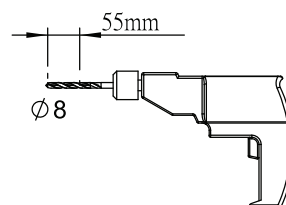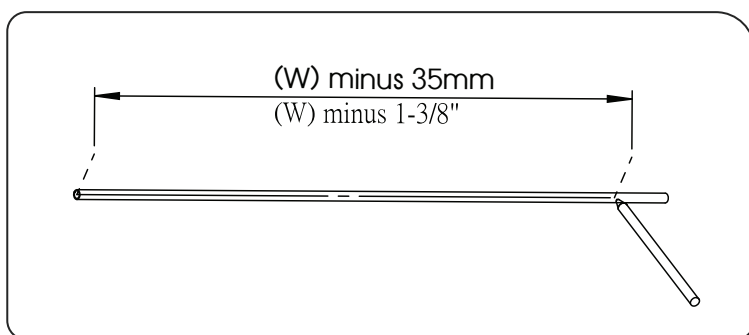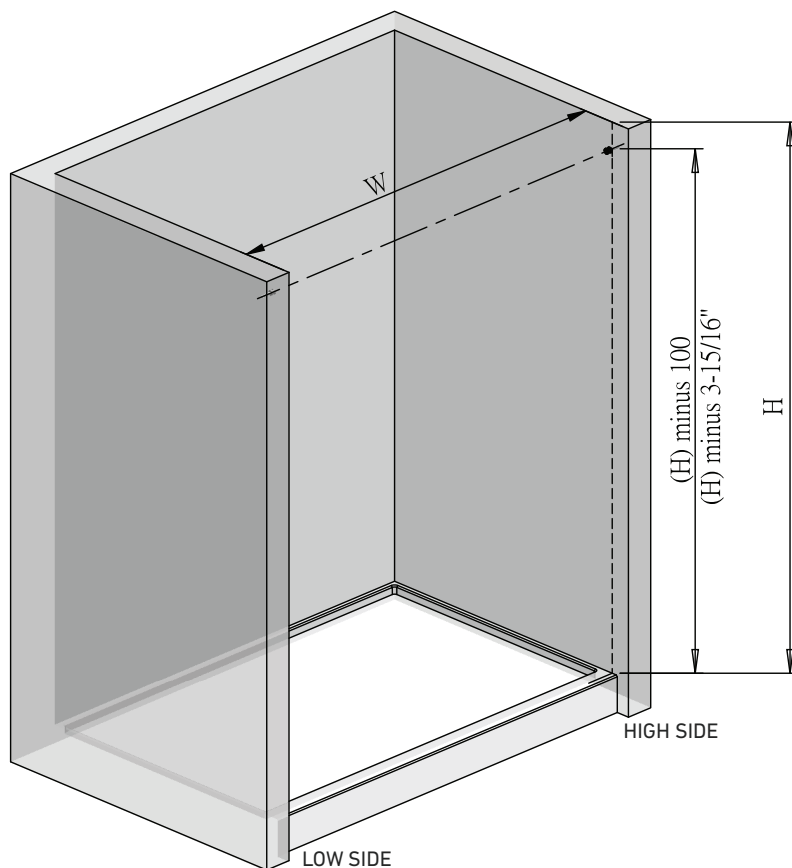


Mount wall fixing on high side of curb first. Level bar to mark opposite wall for second wall fixing.




## STEP 2

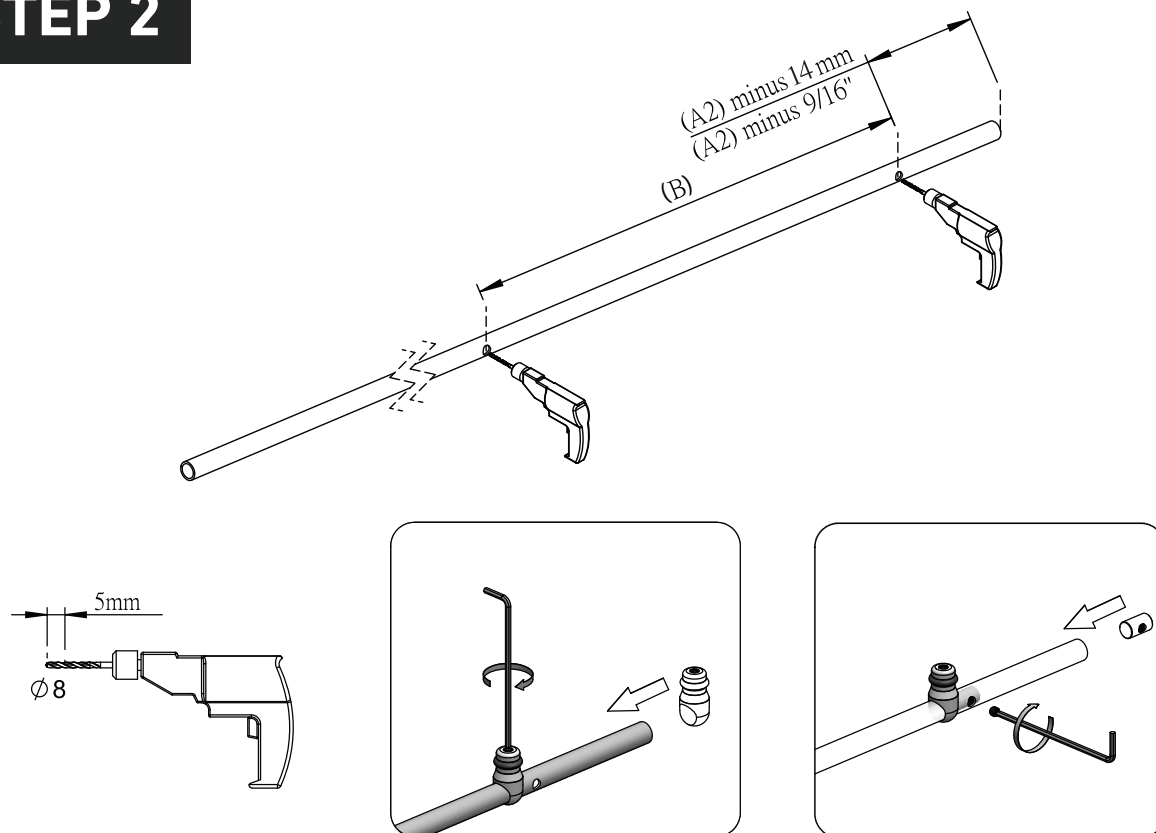



## STEP 3

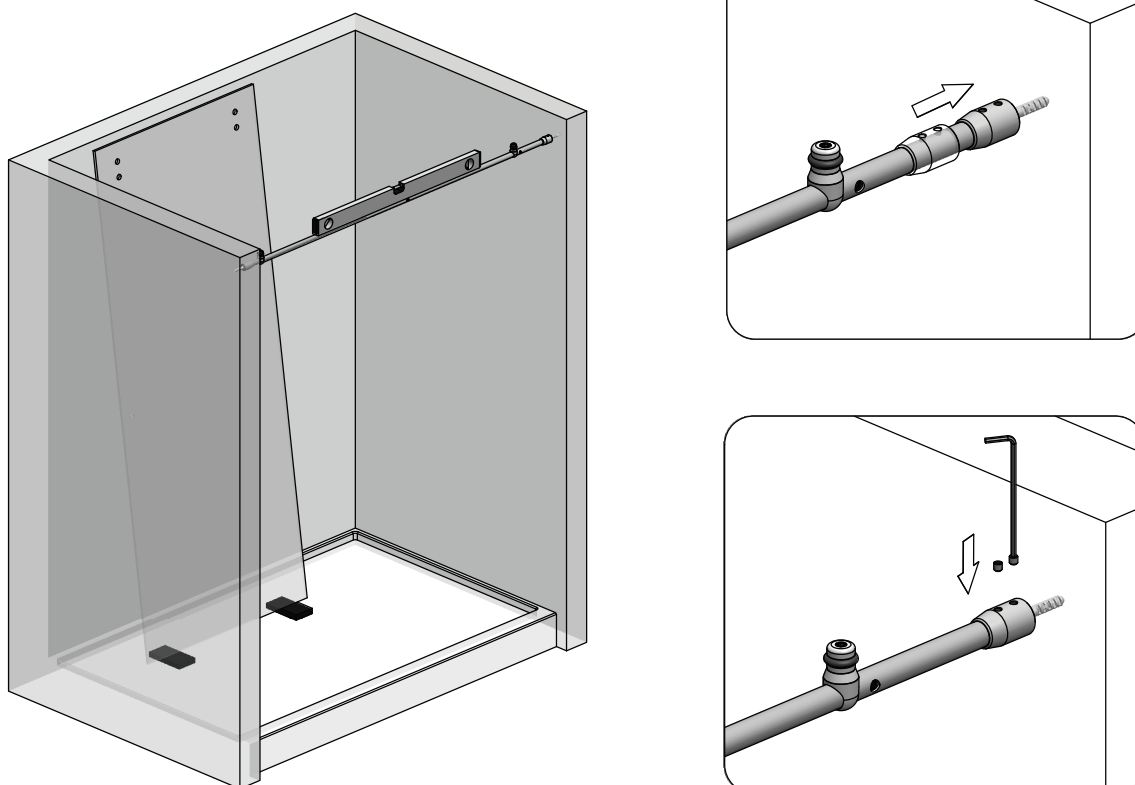



## STEP 4

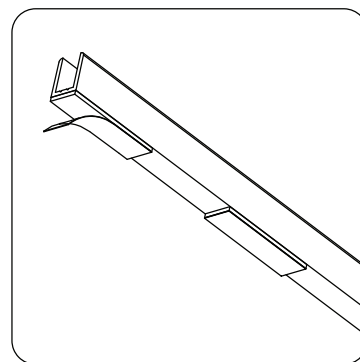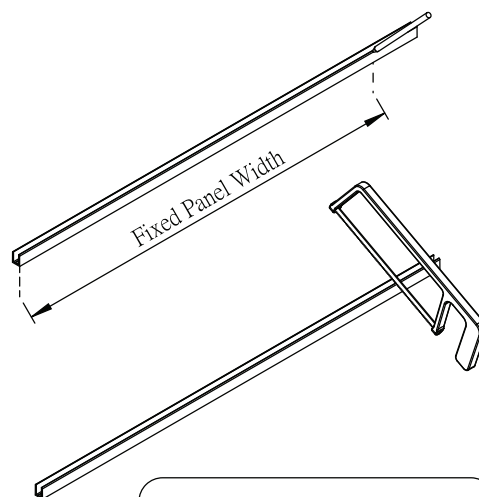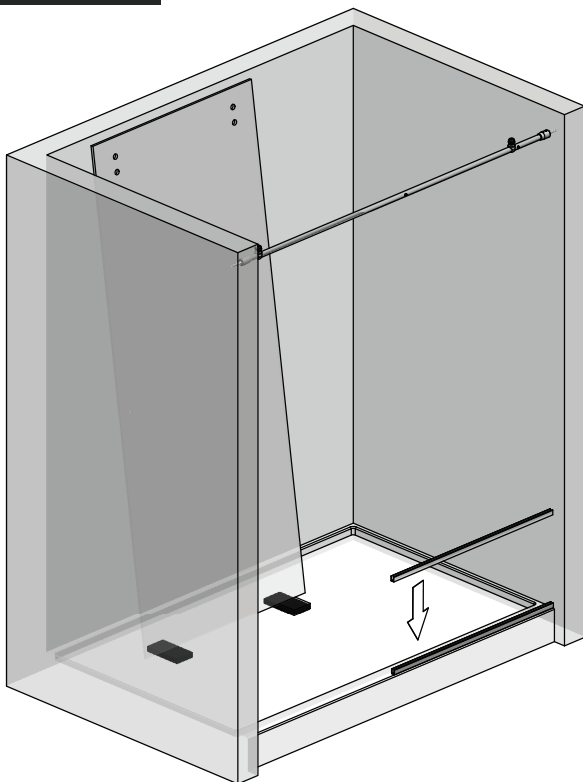





## STEP 5

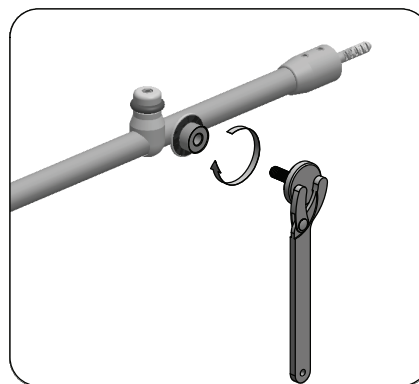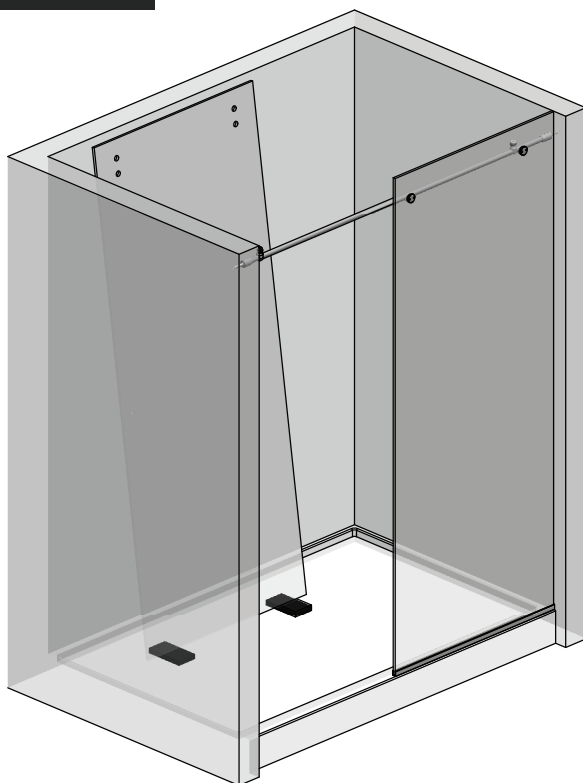

## STEP 6

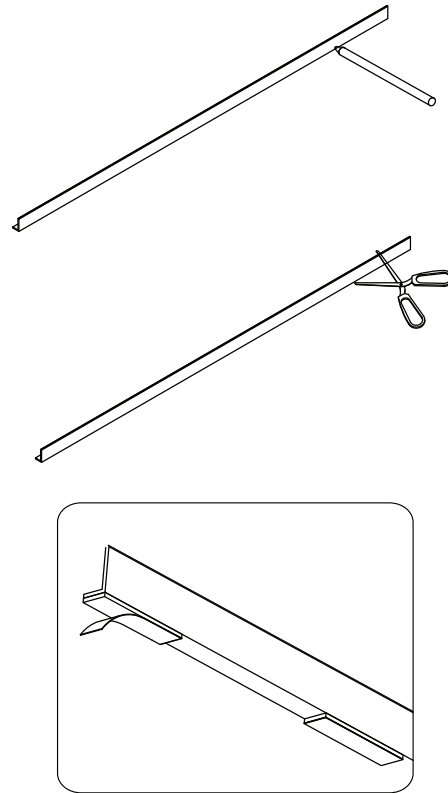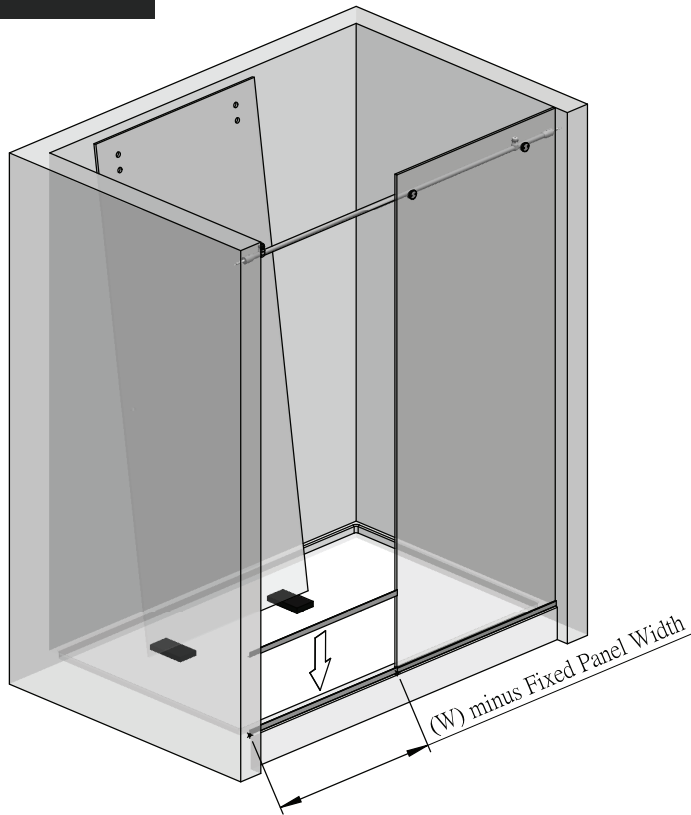






## STEP 7

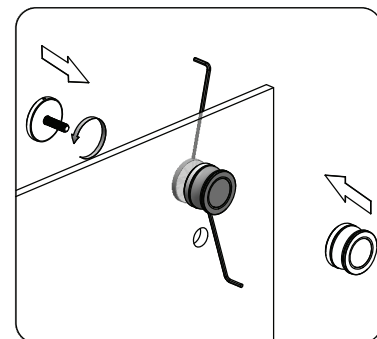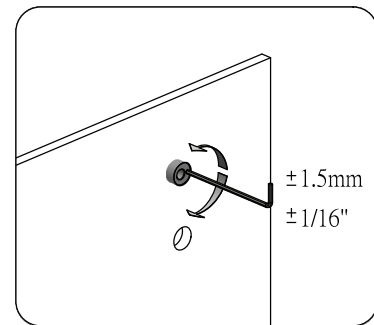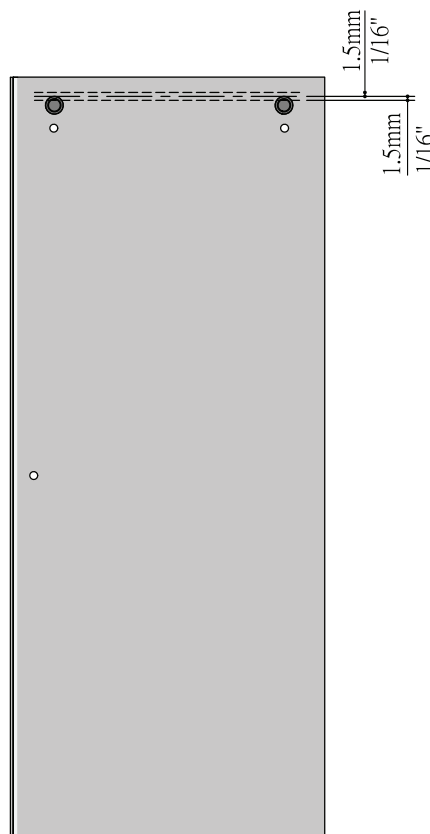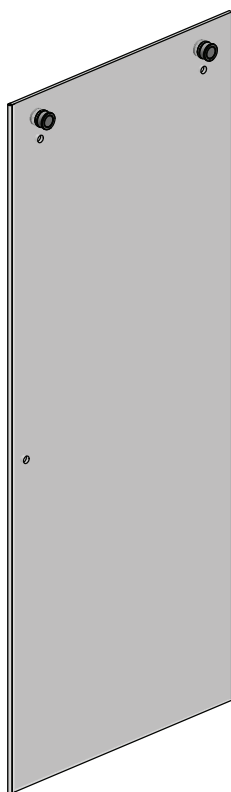



Install Top Roller (with bearing)





## STEP 8

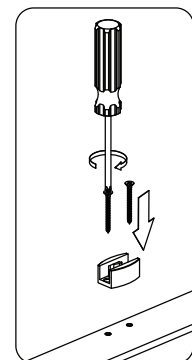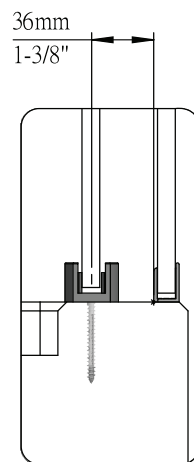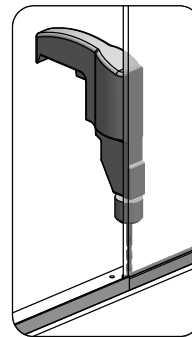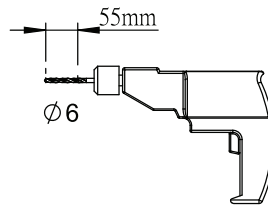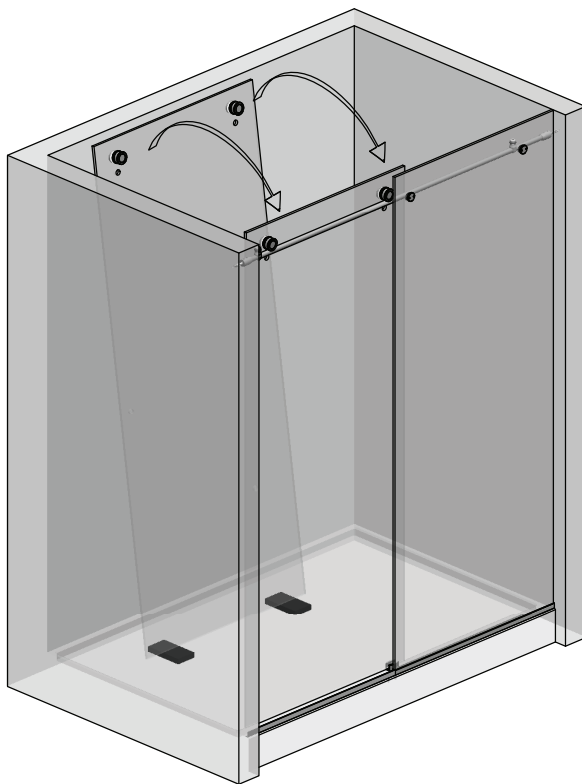


## STEP 9

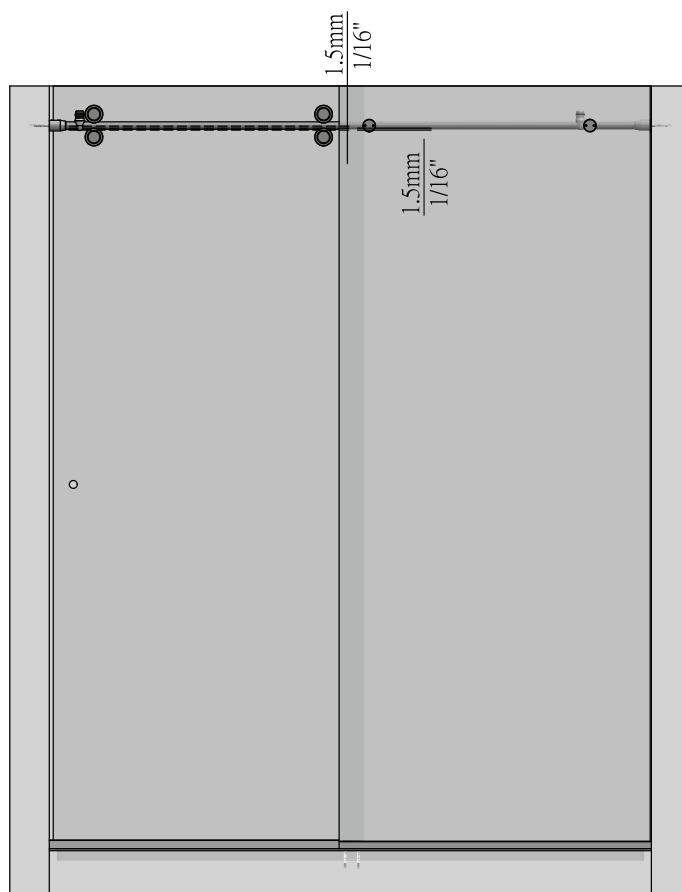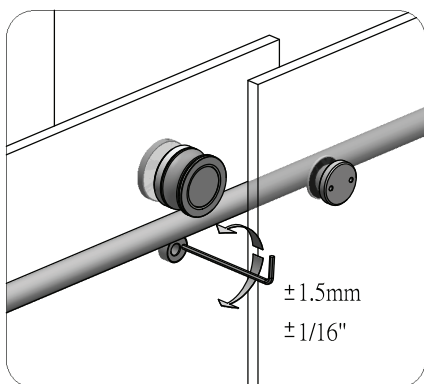




## STEP 10

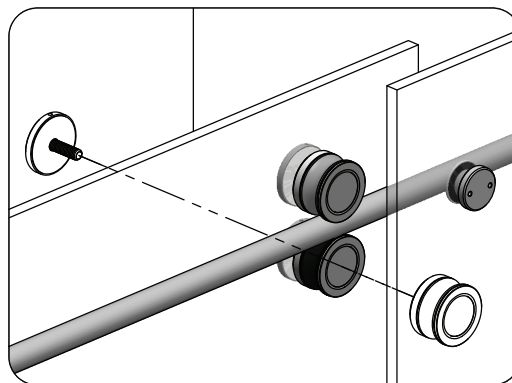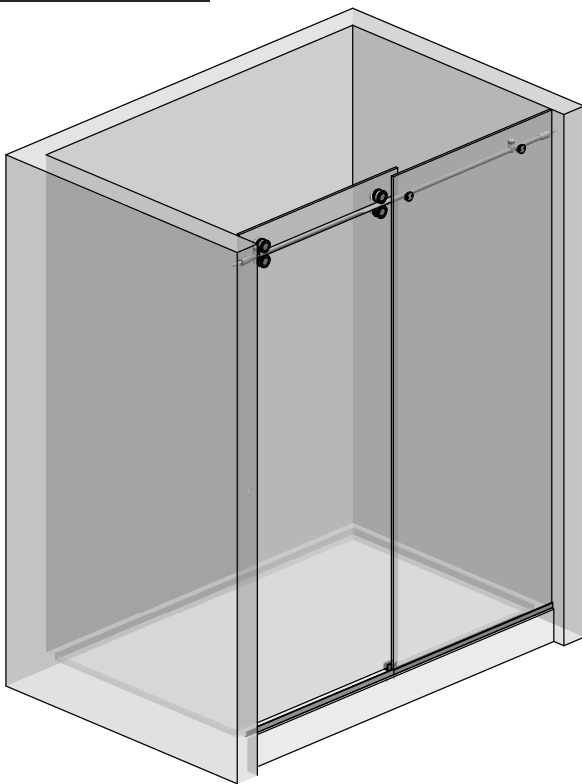




Install Bottom Anti-Lift Pin (without bearing)

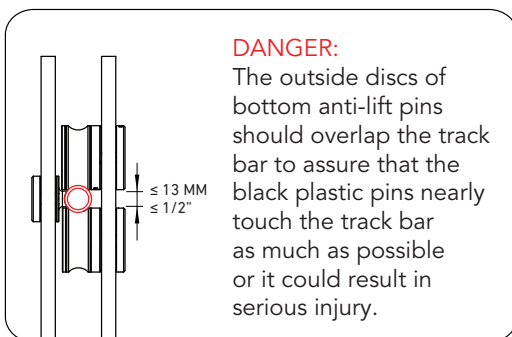



## STEP 11

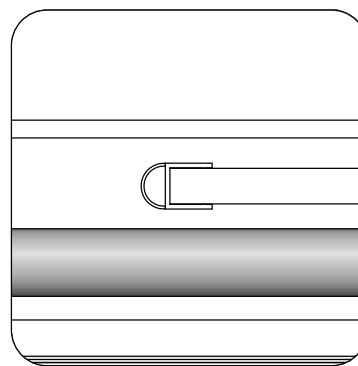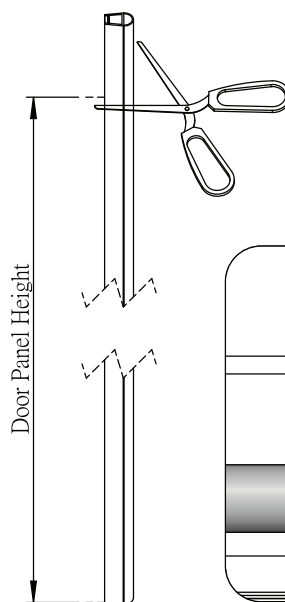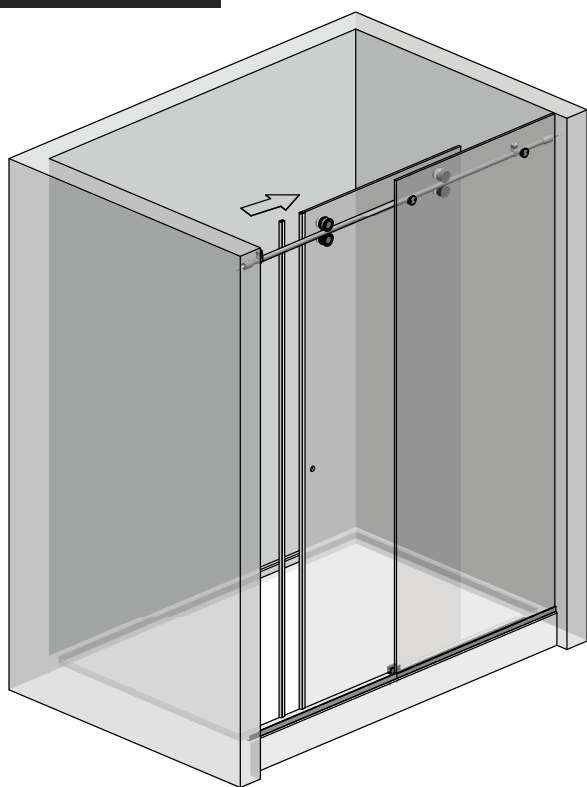

## STEP 12

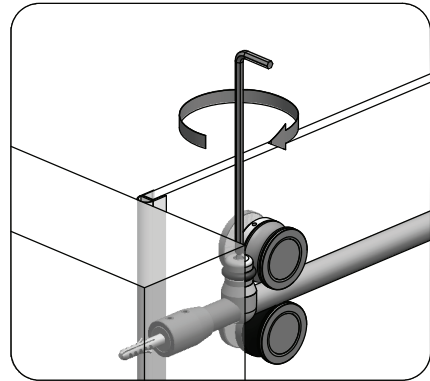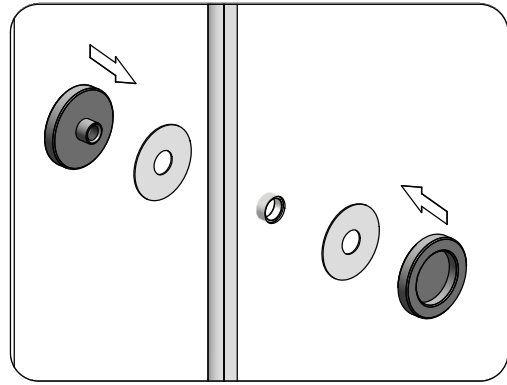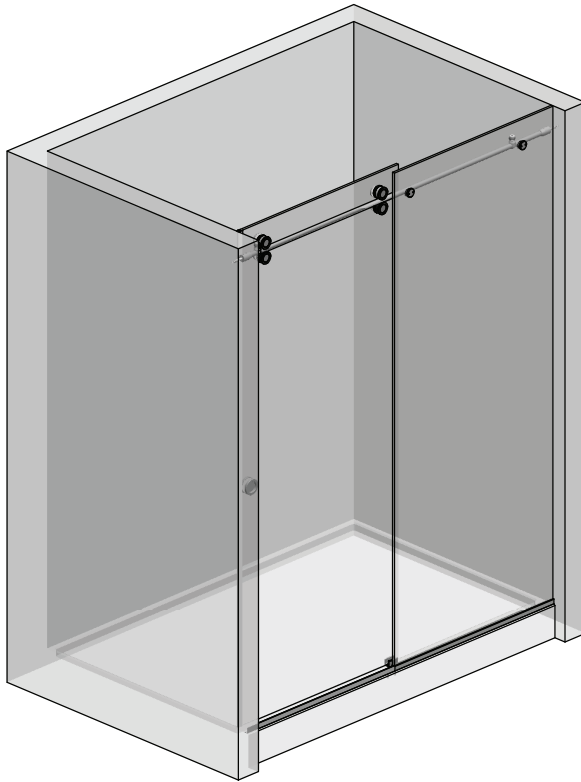

## STEP 13

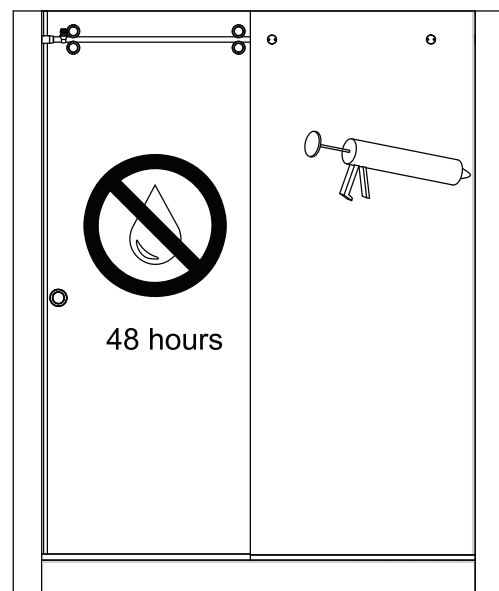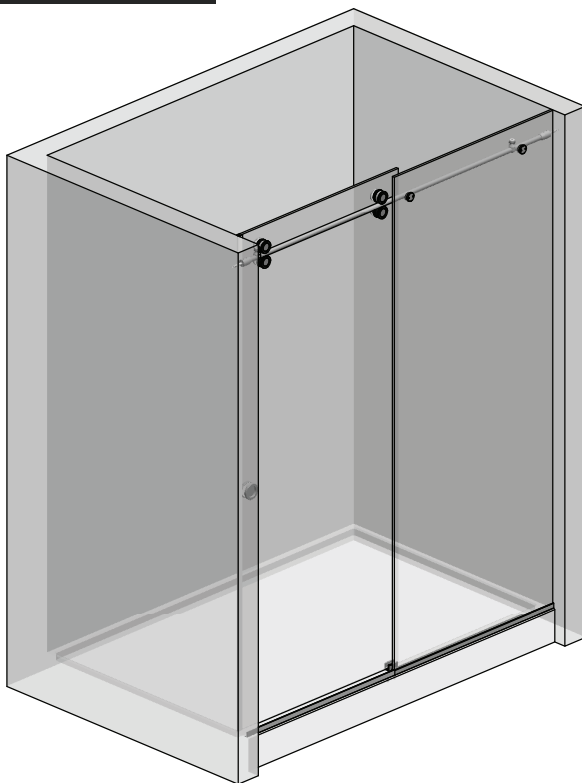

LET CAULKING CURE FOR 48 HOURS BEFORE USE